

Switch on the Seabob

Push the blue button and as soon as the screen is on, pull the trigger/throttle quickly.

Switch off the Seabob

If you leave the Seabob on without touching any buttons, it turns off automatically after 10 minutes approximately. The other way to switch off is: you speed down to 0%. Then you push quickly first the silver button, then blue one and wait for 1-2 sec until the screen changes indications. Then push quickly the trigger again.

Riding

With the red and green buttons, you regulate the speed. Green is to speed up, red is to speed down. By pushing the trigger, you reach the speed you have selected with the green and red button.

Warnings

Most important are the battery and the screen!!!

Regarding battery: when you reach the last 2 red bars of the battery level, take the Seabob out of the water, wash, dry and charge immediately.

Regarding display: When you have the Seabob f.e. on the deck, don't leave the display exposed to the sun.

Cover the display with a towel or something else.

Don't use the Seabob in shallow waters. Not less than 1 m depth, in order to avoid damaging the impeller by stones etc.

The Seabob has to be cleaned with fresh water after usage.

Don't charge batteries while Seabob and charger is exposed to the sun.