

Switch on the Seabob

Push the switch on/off button and as soon as the screen is on, pull the trigger/throttle quickly.

Switch off the Seabob

If you leave the Seabob on without touching any buttons, it turns off automatically after 10 minutes approximately. The other way to switch off is: push the switch on/off button and then quickly the trigger/throttle.

Riding

With the + and - button, you regulate the speed. While pushing the trigger/throttle, + is to speed up, - is to speed down.

Warnings

Most important are the battery and the screen!!!

Regarding battery: when you reach 20% of the battery level, take the Seabob out of the water, wash, dry and charge immediately.

Regarding display: When you have the Seabob f.e. on the deck or platform, don't leave the display exposed to the sun.

Cover the display with a towel or something else.

Don't use the Seabob in shallow waters. Not less than 1 m depth, in order to avoid damaging the impeller by stones etc.

The Seabob has to be cleaned with fresh water after usage.

Don't charge batteries while Seabob and charger is exposed to the sun.